


1 Remove cover under instrument panel or instrument cluster.

2 Pull 2-pole coupling from sensor (3).

3 Connect Ohmmeter to sensor (3). On 1st version resistance should amount to 50—106 Ohms and on 2nd version to 650—1370 Ohms.

4 If this value is exceeded or not attained, replace sensor (3).

1st version

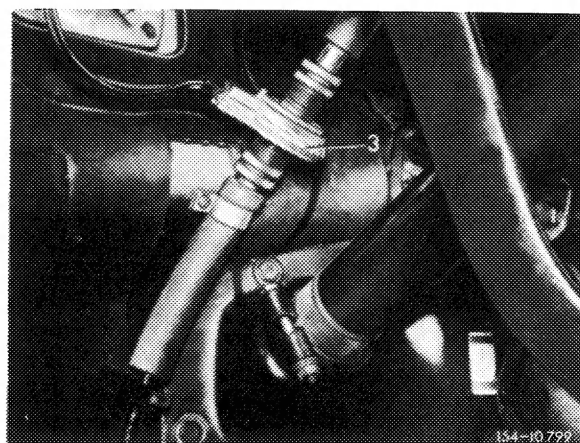

2nd version

